Webofrico[™] Quick Start Guide ZTE MF253

WHAT'S IN THE BOX

- **1** LTE Router
- **2** SIM Card

 \odot

- **3** Power Cable
- **4** Yellow Ethernet "LAN" Cable

LET'S GET YOU CONNECTED





Open your SIM card

- Take your SIM card out of its packaging.
- Pop the SIM out of the card.

Plug in your Router

- Connect your power supply to the router and plug it into your wall socket.
- The router's indicator light will turn blue when your router has connected to the internet.
- This can take anywhere from a few minutes to two business days upon first activation

What the indicator lights mean:







Insert the SIM Into your router

 Insert your Standard SIM into the SIM slot on the left side of your router (push it in until it clicks)



Connect to your Wifi

• Turn your Router upside down to find your SSID (Wi-Fi name) and Wi-Fi key (Wi-Fi password).



 Connect your device (laptop works best) using the above username (SSID) and password (Wi-Fi Key).

DID YOU KNOW

Webafrica Routers are recycled!

As part of our effort to "reduce, reuse, recycle" we recycle our pre-owned routers. Your router may have belonged to someone else before you. Rest assured that it has been cleaned, checked, and restored to "good as new" status. If you experience any issues with your router please let us know soonest so that we can assess and replace if required. We fully insure your free-to-use router, so in the event of accidental damage or theft, we will replace it.

 \oplus

 (ϕ)

 $(\mathbf{\Phi})$

LET'S GET PERSONAL

How to change your Wifi name and password.

STEP 1

Connect your ZTE router to your PC by either: Directly with the yellow LAN cable, or By Wifi, using the username and password which you will find on the sticker at the bottom of your router.

STEP 2

Once connected, open your browser window (Google chrome, Firefox, Internet Explorer, etc.) and type in the following IP address in the URL field: **192.168.0.1**



STEP 3

 \odot

In the window that opens, enter the default router username and password: **Username:** *admin*

Password: admin



STEP 4

Click the Wifi Settings Icon.



Click on the "Main SSID" button.

Main SSID

STEP 5

In the window that opens, you can set your Wifi name and password to whatever you'd like.

 \bigcirc

 (\blacklozenge)

Network name (SSID): This is where you set your Wifi name *Password*: This is where you set your password.

Network Name(SSID) *	ZTE_225095
	☑ Broadcast SSID
	All the wireless client device is completely isolated
Security Mode	WPA2(AES)-PSK
Password *	
	Display Password
Max Station Number	32 *

Click "APPLY"

Apply

That's it! You're done.

TECHNICAL SUPPORT

If you need any assistance, please feel free to contact our support team.
We are available from 08:00 - 20:00 Monday to Saturday,

and from 10:00 - 20:00 on Sundays and public holidays.

Whatsapp Support : **0214649500** Support: **086 000 9500** Or e-mail us at support@webafrica.com